

Calibrating the sensor

CL-P521,621,631


CL-S521,621,631

1. Pull out the labels so you have about 50mm back paper without label. Place the spot without the label on the sensor. Close the printer again and you are ready to calibrate the printer.




2. Turn off the printer. Press and hold "Pause", "Feed" and "Stop" while turning on the printer again. Release all the buttons when you hear a beep.


(Power and Print is green and Condition is red, see picture 1)

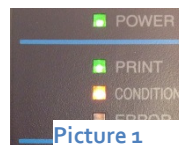

Picture 1

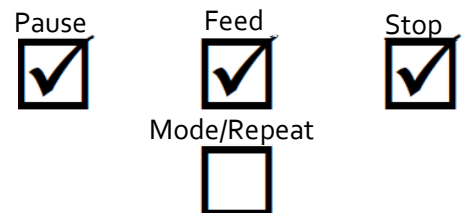

3. Now press and hold "Mode/Repeat". While holding "Mode/Repeat" press "pause". Now the printer should start buzzing for about 2 seconds.

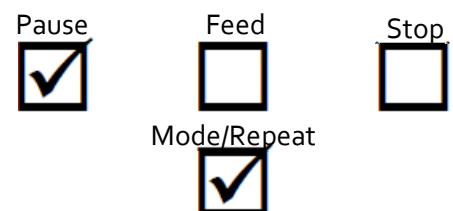

4. Now press "Stop". Turn the printer off wait a few seconds and start it again. Press "Feed" to confirm that the printer is working as it should.

