

## Guide

### Resetting internal print servers

Follow these steps

Turn the printer off.

Press the status button of the print server and keep it pressed.

Turn the printer on.

Wait until the Activity- and Status-LED start blinking simultaneously.  
*The Reset Mode is activate.*

Release the status button for about 2 seconds.  
*The LEDs blink alternatingly.*

Press the status button once again and keep it pressed.  
*The LEDs blink simultaneously.*

After few seconds only the Activity-LED blinks consistently.

Release the status button.

Source: Citizen – printserver user manual – page 155

When the print server has been reset you need to turn the printer off and on again.

Turn the printer off.

Turn the printer on.

Source: Citizen – printserver user manual – page 155

By default the printer will get an IP-address from a DNS server. You can now print a status and check that it works.

Press the status button for a short time.

Citizen – printserver user manual – page 155

If you want to change the IP-address to a static IP-address go into a browser and type the IP-address into the address field. From here you can configure the network settings:

**CITIZEN**  
Print Server

Please choose your language

**1 Europe, Middle East and Africa**

Citizen Systems Europe  
London, Stuttgart

UK: +44 (0)20 8893 1900  
Germany: +49 (0)711 3906 400  
Web: [www.citizens-europe.com](http://www.citizens-europe.com)

**2 United States, Canada and South America**

Citizen Systems America  
Torrance, CA

Phone: (310) 781-1460  
Web: [www.citizens-systems.com](http://www.citizens-systems.com)

**3 Japan and Asia**

Please contact the local dealer where you purchased the product.