


**HB2100 Charging Cradle Indication**

Descriptions	Power	Beeper
Power on	Steady blue	Off

**HB2110 Smart Cradle Indications**

Descriptions	Indicators		Beeper
	Center	Side	
Power on	1 blue blink	Off	Power on beeps
Smart Cradle Upgrade State	Off	Steady red	Short clicks
Uninstall state	Off	Alternative red-green blinks	Off
PICO Mode	Radio Connected	Steady blue	Off
	Radio Disconnected	Off	Off
PAIR Mode	Radio Connected	Steady blue	Off
	Radio Disconnected	Off	Off
Smart cradle paged by scanner	PICO Mode	Steady blue	6 page beeps
	PAIR Mode	Steady blue	6 page beeps

# Indications

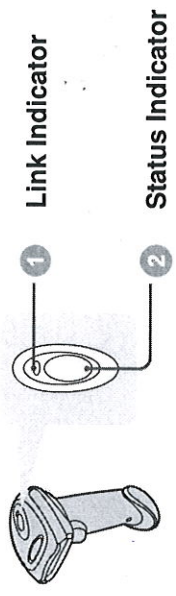

Descriptions	Link Indicator	Beeper
Radio connected	1 blue blink per 2.5 sec.	Off
Radio disconnected	3 blue blinks per 2 sec.	Off
During connection	Quick blue blinks	Short clicks
Radio connection built	1 blue blink per 2.5 sec.	4 beeps in ascending tone
Radio connection lost	3 blue blinks per 2 sec.	4 beeps in descending tone
Data Transmission	Quick blue blink	Short clicks
Descriptions	Status Indicator	Beeper
Under charging (on cradle)	Steady red	Off
Fully charged (on cradle)	1 green blink at regular interval	Off
Under batch scanning	1 green blink per 2.5 sec.	Off
Pair failure	Steady red	2 Di-do Di-do beeps
Out of memory	2 red blinks	2 long beeps
Battery power low	1 red blink at regular interval	1 beep at regular interval
Battery power extremely low	8 red blinks	8 beeps
Good read	1 green blink	1 good read beep
Under Configuration	Steady red	Off
Uninstall state	Alternative red and green blinks	Off
Upgrade state	Steady red	Short click
Time out warning	Off	3 long beeps
Paged by smart cradle	Off	6 page beeps
Sleep state / Battery no power	Off	Off